



Providing Election Solutions for 40 years

Cleaning and Disinfecting Infinity Voting Equipment

- Use a soft cloth to clean the case of the unit. Use a mild detergent or isopropyl alcohol if necessary. Avoid using spray and abrasive cleaners. Allow ample drying time after cleaning before operation.
- Clean display area first using a soft dry cloth to remove dust, then spray window or disinfectant cleanser on soft cloth to wipe display surface. Do not spray cleanser directly on display area.
- Clean keyboard and Cast Vote button with soft cloth, sanitizing wipes or keyboard vacuum.
- Voters may use hand sanitizer or be given disposable gloves if desired.